

## INSTRUCTIONS for the use of haid-tec MelaminPlusPads®

Surfaces can be cleaned highly efficiently with haid-tec Melamin-PlusPads®.

### USAGE

haid-tec MelaminPlusPads® can be used both manually as well as mechanically.

#### The following points should be noted, however:

- Never use dry haid-tec MelaminPlusPads®!  
Where appropriate, moisten the pads before use.
- For surfaces that are easily damaged (e.g. high-gloss synthetic materials, lacquered surfaces etc.) test on a small inconspicuous area before use.




Due to the high level of mechanical performance involved, only state-of-the-art scrubber drier machines with a powerful drive motor and sufficient battery capacity should be used.

Mount the haid-tec MelaminPlusPads® onto the appropriate pad holders of the machine. The grey-white melamine foam should face the floor surface. The use of an internal hole mount is recommended.

As a result of these outstanding cleaning properties, the use of cleaning products can be reduced, and potentially dispensed with entirely. haid-tec MelaminPlusPads® can be used with all conventional cleaning products. Please refer to the manufacturer's instructions regarding dosage and use.

During cleaning, the Pads will wear out. If the grey-white melamine foam gets used up, new pads should be mounted.

In contrast to standard commercial melamine pads, haid-tec MelaminPlusPads® have a considerably longer lifespan - dependent on the surface finish of the floor, the quality of the fitting and the type of cleaning machine used.

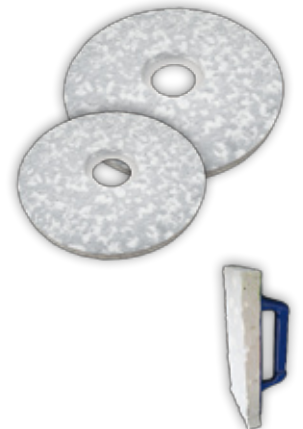

Further information is available at [www.melaminpads.de](http://www.melaminpads.de)

In case of questions about haid-tec MelaminPlusPads®, or should problems arise, please contact:

our **hotline**                    **+49 (0)7393 95 20-69**  
   **working days from 8:00 to 18:00 (CET) or**  
e-mail us at                    **info@melaminpads.de**